



How to install LT-6000S' External GPS Antenna

1. Open rubber cover on the back of LT-6000S.



2. Plug in the GPS antenna connector vertically into antenna jack.



3. When unplugging the external antenna, hold the connector and unplug it vertically.



4. Push down the top of rubber cover into antenna jack first.



Then push down the bottom of rubber cover to close it.

